

SETTING WIFI CALLING  *FOR*


SONY

HOW TO TURN "on"


1. press *444*41#



2. go to 'Settings' > select 'more'

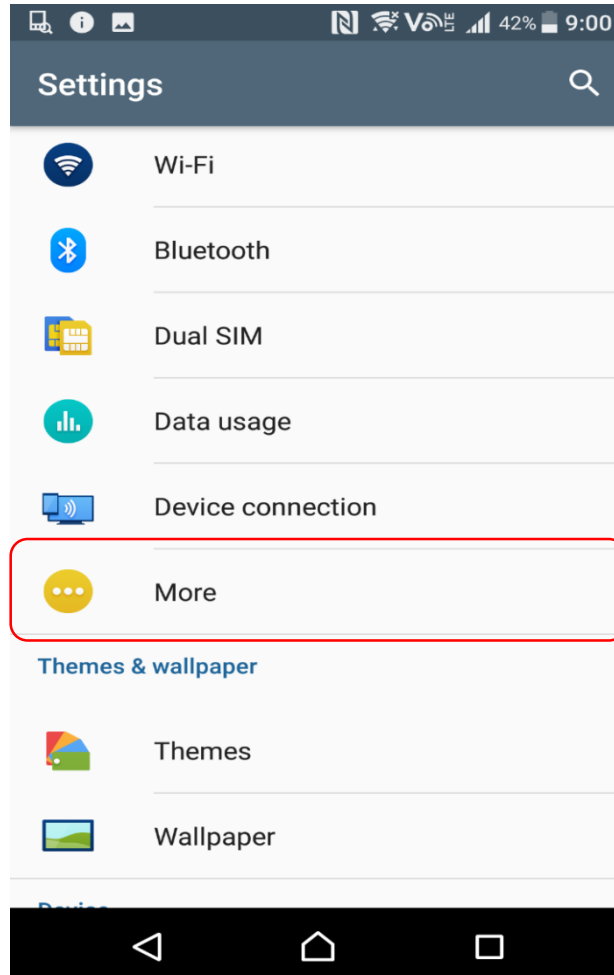

3. select 'wireless & networks' > wi-fi calling

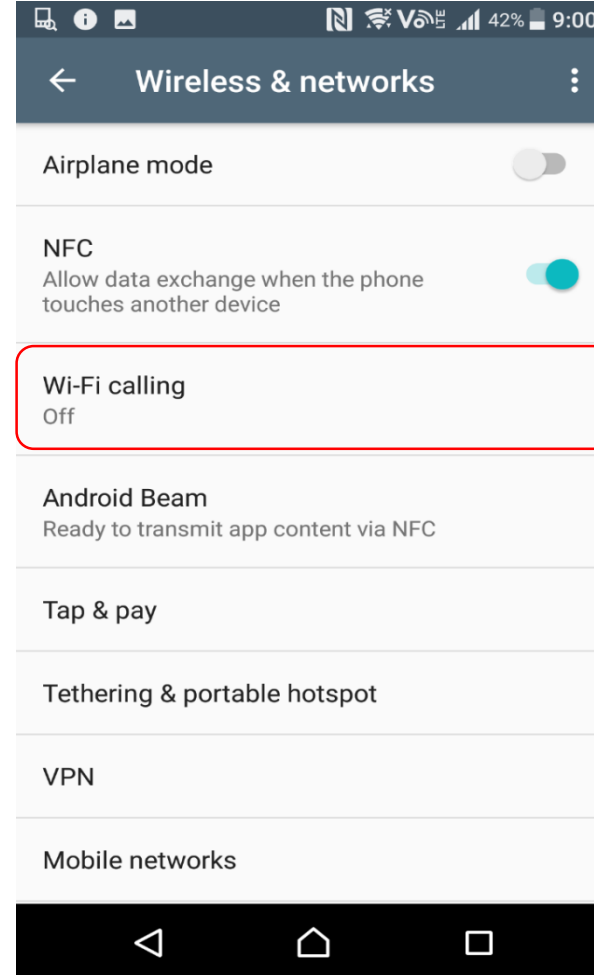

4. select "on"

